



# Battery Tester


## 1.5v batteries

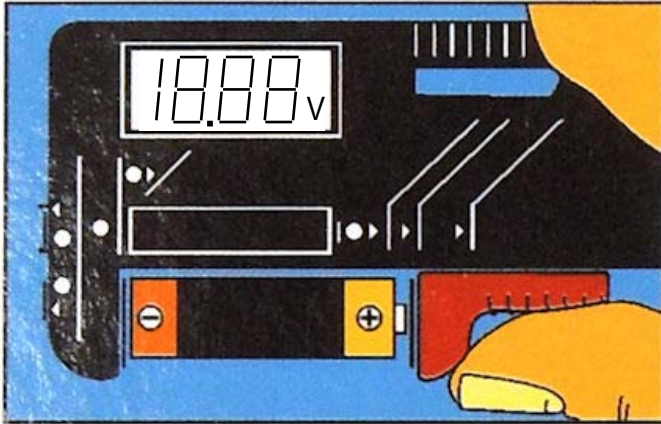


## 9v batteries

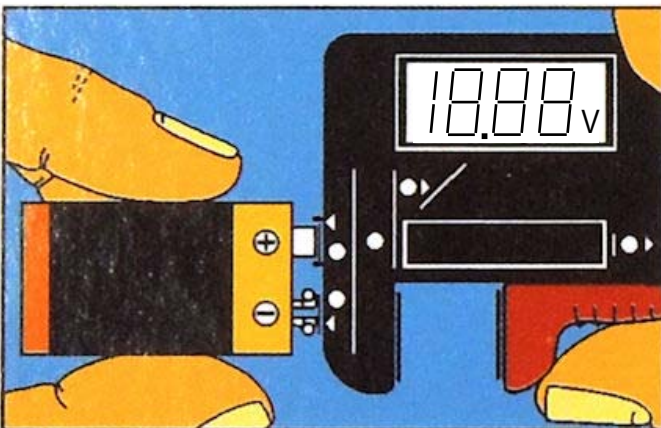

## 1.5v miniature cells

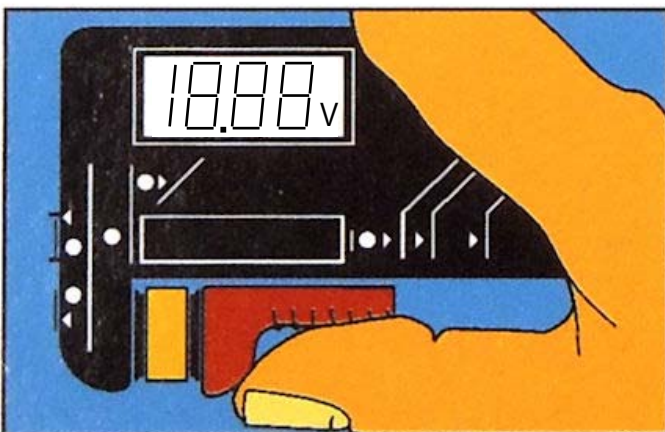

## Reading the meter

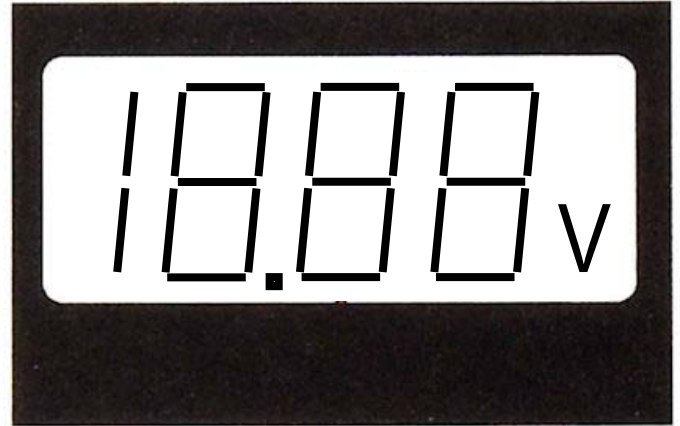

### 【1.5V】

good (良好): 1.5 ~ 1.28V

Low Power (電圧低い): 1.27 ~ 1.15V

Replace (交換): 1.15V未滿

### 【9V】

good (良好): 9 ~ 7.8V

Low Power (電圧低い): 7.7 ~ 6V

Replace (交換): 6V未滿

The Battery Tester may be used to test the following sizes:

1.5v	AAA, HP16, MN2400, R03
	AA, HP7, MN1500, UM3
	C, HP11, MN1400, SP11, LR14, UM2
	D, HP2, MN1300, SP2, R20, UM1
9v	PP3, MN1604, 6F22, 006P

### Don't forget

The Battery Tester is activated by the battery being checked. Keep test times as short as possible, to avoid unnecessary battery drain.