

LED Mini Dream-color controller

LED2017-21KEY

Auto play 366 Modes

Power/Play pause

366 kinds mode switching


M+: Mode+
M-: Mode-

10 levels speed adjust

S+: Speed+
S-: Speed-

Monochrome Display
Press these buttons,
light strip displays its
corresponding colors.

Press 5 seconds, remote
controls are one to one
matching(only this remote
control can control it).
(This feather is available only
for the RF version)

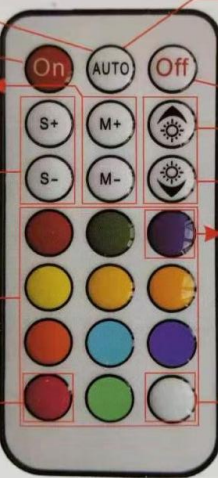

In the off state, press this button to
enter the setup menu, then press the
M+ or M- to adjust LED pixels. Press
the blue button to adjust the RGB
sequence. After complete setting,
press OFF to save/exit.

Shutdown
Auto save when shutdown

Brightness+
Brightness adjustment(32levels)
Brightness -

RGB sequence adjustment function
In the state of shutdown, press the
AUTO to enter the setup menu. Now, the
first three lights of LED strip display the
current RGB sequence. Press this
button to adjust the RGB sequence until
the sequence of the previous three
lights are red, green and blue. Then
press the OFF button to save.

Press 5 seconds to cancel the
remote control matching. All remote
controls can control it.(This feature
is available only for the RF version)

LED 迷你幻彩控制器

LED2017-21KEY

自动播放366种模式

开机/播放暂停

366 模式切换

M+: 模式+
M-: 模式-

10 速度调节

S+: 速度+
S-: 速度-

静态单色, 快捷按钮

按下显示对应颜色

长按5秒, 遥控器一对一匹配

(只针对RF版本有效)



关机状态下, 按该按钮进入
设置菜单, 这时可以按M+和
M-来调节LED点数, 按蓝色
键可以调节RGB顺序, 设
置完成按OFF键保存退出。

关机 (关机自动保存)

亮度+

256级灰度, 分32刻度亮度可调

亮度-

RGB顺序调节功能 关机状态下, 按
AUTO进入设置菜单, 此时灯条前
面三个灯显示当前的RGB的顺
序, 按该键来调节RGB顺序, 直到前
面三个灯的颜色顺序为红、绿、
蓝为止, 再按OFF键保存。

长按5秒, 解除一对一匹
配, 恢复所有遥控器通用
(只针对RF版本有效)