

Ss

SainSmart® DDS Series User Manual (Software)

For Oscilloscope, Signal Generator and Logic Analyzer

Content

1	Welcome.....	3
2	Software Version	3
3	System Requirement	4
4	Getting Started	5
4.1	Driver Installation on Windows XP.....	6
4.2	Driver Installation on Windows 7	7
	Driver Installation on Windows 7 <i>32bit</i>	7
	Driver Installation on Windows 7 <i>64bit</i>	7
4.3	Driver Installation on Windows 8.....	7
5	Software introduction	8
5.1	Overview.....	8
5.2	Basic Operation	8
5.2.1	Start and Stop.....	8
5.2.2	Waveform Display Area	9
5.2.3	Display Menu.....	10
5.2.4	Auto Measurement	14
5.2.5	Menu	16
5.2.6	Horizontal Toolbar (Settings)	19
5.2.7	Toolbar.....	21
5.2.8	Record and Review	22
5.3	Signal Generator Software Function	25
5.3.1	PWM.....	25
5.3.2	Basic Waveform Signal.....	26
5.4	Logic Analyzer Software Function	26

1 Welcome

SainSmart® DDS Series oscilloscopes deliver unique features and high performance, ideal for research and education.

2 Software Version

Current Software Version: SainSmart DDS V1.2

Functions	Details
Live Sampling	Dual channels for the live display of consecutive samples
Record and Review	Waveform files can be saved to retrace and review
Trigger	No Trigger, Normal Trigger, Single Trigger, Auto Trigger
AC & DC Coupling	Support AC & DC coupling
Auto Measurement	Display diagrams of maximum, minimum, average, frequency, period, positive width, negative width, duty rate, peak-to-peak, rise time and Vrms
Cursor Measurement	Horizontal and vertical markers indicating X/Y-axis values of waveform data
Zoom Function	Zoom in/out
FFT Frequency Domain Analysis	Real-time display of FFT amplitude-frequency curve
Move Left/Right	Waveform shift
Math Operation	CH1+CH2, CH1-CH2, CH1*CH2
Lissajous Pattern	Frequency measurement or phase difference
Save	Save the waveforms as .txt
Screenshot	Screenshot of the current software interface

 
OUT OF RANGE Warning	When collecting data exceeds the range, a light red translucent rectangular bar at the top of the waveform will be displayed to warn the waveform has exceeded the scope, but this function is only to warn the user, does not affect the software running
Shortcuts key	Add (Ctrl + <-) / (Ctrl + ->), (Ctrl + M), (Space), (Ctrl + A) shortcut function to Waveform moves, recording and playback, start / stop, calibration windows

Feature	Details
Green App	standalone application
.NET Framework	.Net Framework 2.0 provides a comprehensive and consistent programming
OS Support	Win XP, Win 7, Win 8 (both 32 bit and 64 bit)
Versatile Algorithm	Improved algorithm

3 System Requirement

Item	Description
OS	Support XP, Win 7, Win 8 (32 & 64 bit)
CPU	>2.0G
RAM	>1.0G
SDK	.Net Framework 2.0
Ports	USB 2.0 compliant port
Temperature	0 ~ 40 centigrade

Note: .NET Framework 2.0 is necessary on XP OS. We provide 32-bit .Net framework 2.0 (dotnetfx20.exe) in the software package for your convenience.



.Net Framework 2.0 is pre-installed on Win 7 OS.

You can also get the latest version on

<http://www.microsoft.com/en-us/download/details.aspx?id=1639>

4 Getting Started

1. Plug in your device. Windows will recognize it and have your computer to work with it. Please unplug other USB devices in case of interference from its high current.

2. Install the driver. You will find the driver under the folder “driver” in the software package. Detailed instructions on how to install driver on different OS are described in Chapter 4.1 and 4.2.

3. Run the software application. Click the Start button on the lower right corner, and it shows the zero voltage waveform of Channel 1. Turn on CH2, the waveform of Channel 2 will display.

4. The small metal tip between the two BNC ports will output a square wave signal of 1KHz with an maximum of about 3.3V. You can use it to test, calibrate and set up the device:

- Switch the probe to x1;
- Connect one end of the probe to CH1 of the device, and the other end to the small metal tip;
- Turn the Time/DIV to 1ms, and the measured waveform will be displayed.


4.1 Driver Installation on Windows XP

1. Right-click My Computer to run the **Device Manager**, click **Other Devices**, and right-click **USBxxx** to select Update the Driver.
2. Choose **Install from a list or specific location**, and **Next**.



3. Click **Browse**, setup the location path, such as E:\ Driver_XP_Win7\driver, and then **Next**:

Please choose your search and installation options.

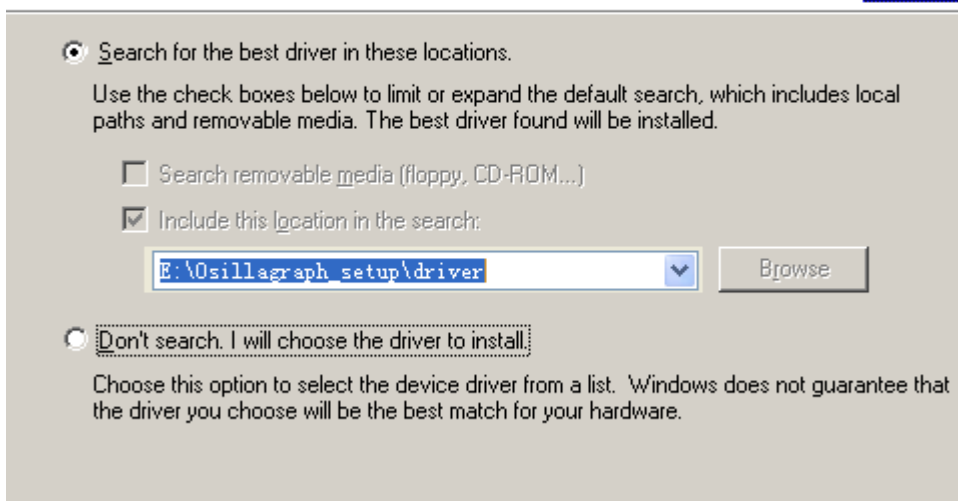

4. After the installation, you will find our device in the device manager.

4.2 Driver Installation on Windows 7

Driver Installation on Windows 7 ^{32bit}

1. Right-click My Computer to run the **Device Manager**, click **Other Devices**, and right-click **USBxxx** to select **Update the Driver**.
2. Update the **USBxxx** driver on My Computer.
3. With the driver path such as E:\ **Driver_XP_Win7\driver**, click **Next**.

*(If Windows can not verify the publisher of this driver software, please click **Install This Driver Software Anyway**.)*

Driver Installation on Windows 7 ^{64bit}


1. Right-click My Computer to run the **Device Manager**, click **Other Devices**, and right-click **USBxxx** to select **Update the Driver**.
2. Update the **USBxxx** driver on My Computer
3. With the driver path such as E:\ **Driver_Win7_64\driver** , click **Next**

4.3 Driver Installation on Windows 8

On Windows 8 (32 bit or 64bit), the device driver would be installed automatically since the device plugged in. On other OS, we may have to install the driver manually.

5 Software introduction

5.1 Overview

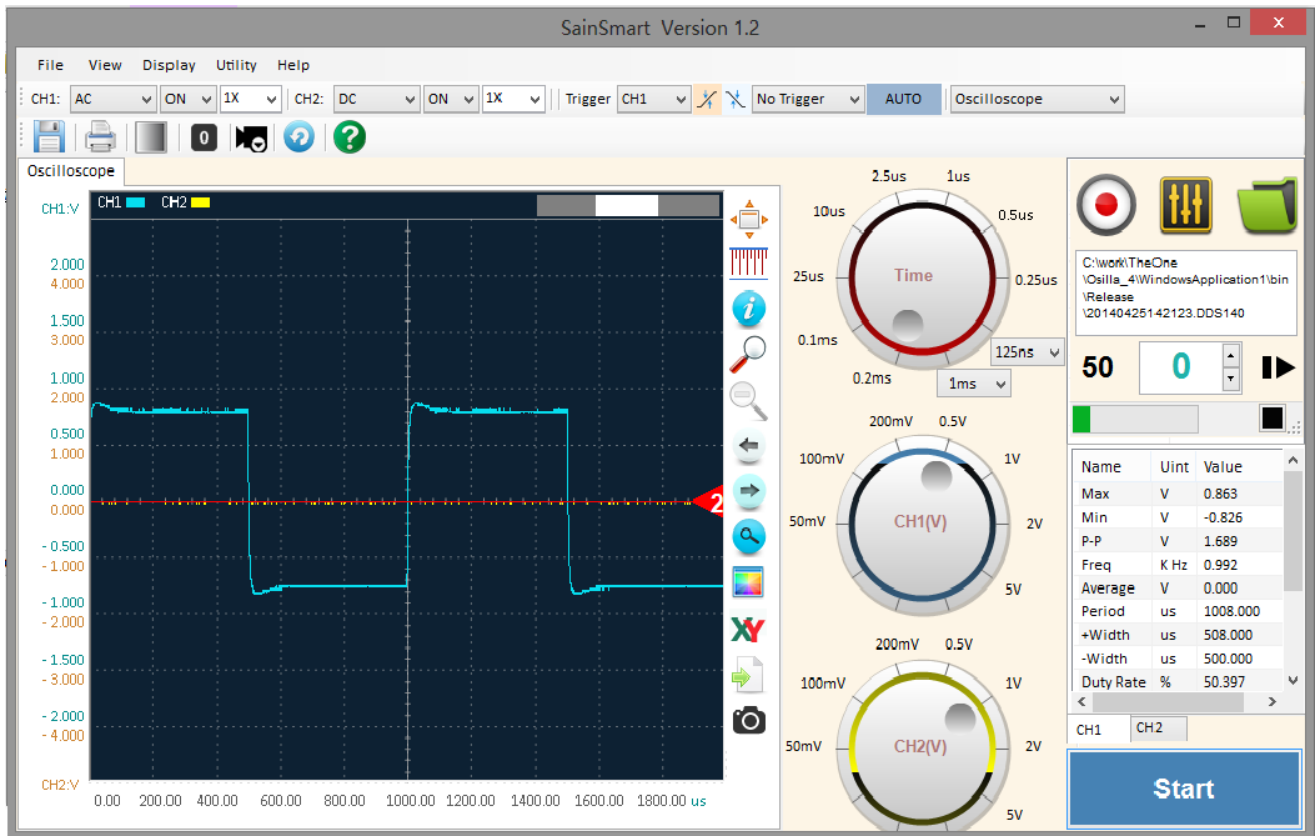

5.2 Basic Operation

5.2.1 Start and Stop

There are two ways to start the scope:

1. Open this software, and then plug in the device.
2. Open this software after plugging in the device, and then click the Start button or the keyboard spacebar.




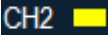
Please click the Stop button and exit the software before unplugging the device or click the

spacebar on the keyboard again.

Stop


5.2.2 Waveform Display Area

5.2.2.1 Waveforms

The Display Area shows waveforms from CH1 (blue)  and CH2 (yellow) .

5.2.2.2 Zero-input positions


You can drag the triangle markers   to adjust the zero-input position for each channel.

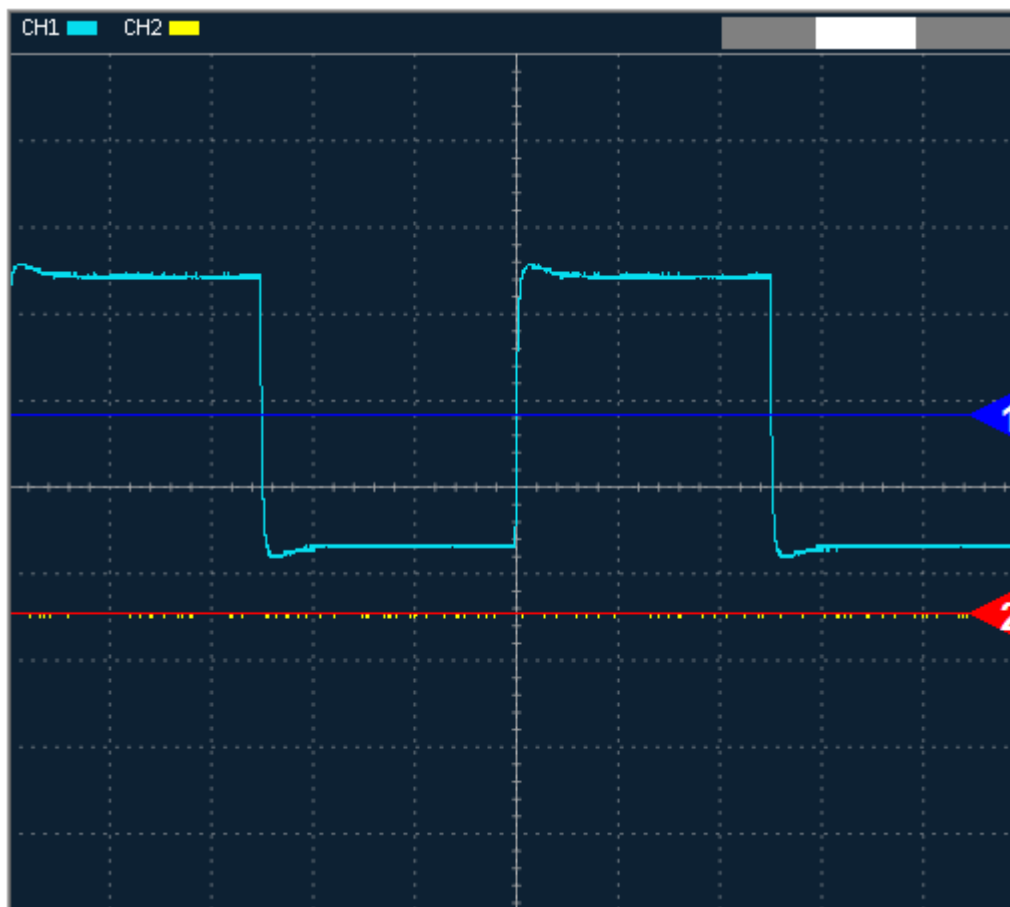



5.2.3 Display Menu



 
5.2.3.1 Fit all



5.2.3.2 Measurement

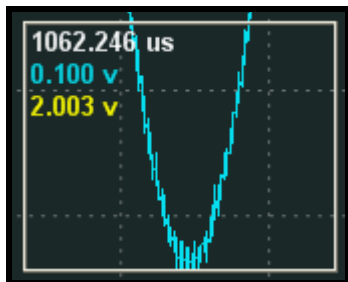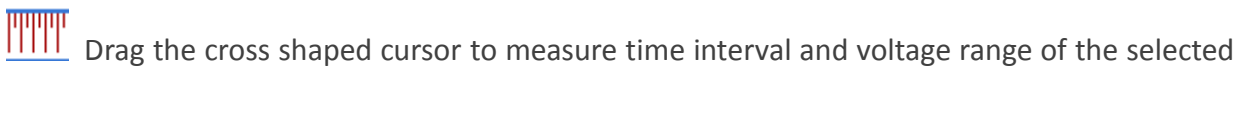



5.2.3.3 Info

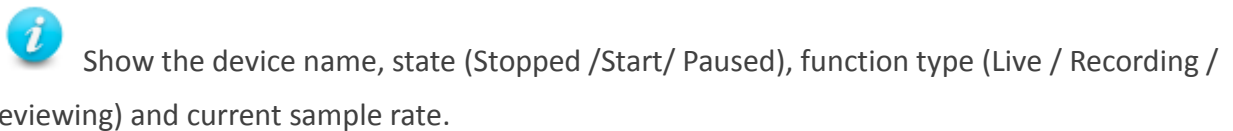

```
Device: DDS140
State: Stopped
Type: Live
Sample Rate:
100MSPS
```

5.2.3.4 Zoom in

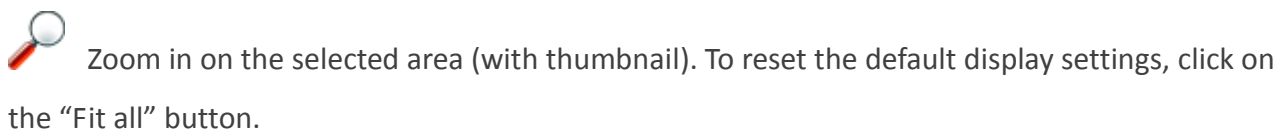

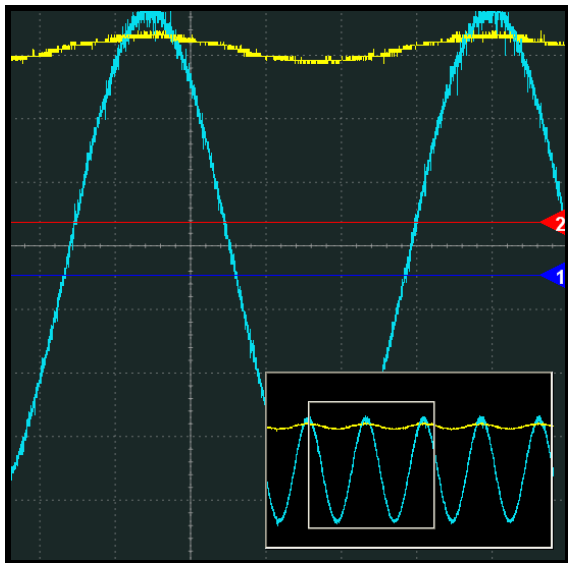

5.2.3.5 Zoom out



Zoom out on the horizontal axis.

5.2.3.6 Navigation Tool



Move horizontally through the trace. Click to a step move, and keep holding a mouse down state to move continuously. We can also move through the trace by mouse dragging conveniently.

5.2.3.7 Zoom in of X




Zoom in on the horizontal axis.

5.2.3.8 Color Mode



Switch the color mode. The black-and-white mode is suitable for creating screenshots for reports; the color mode is suitable for observation.

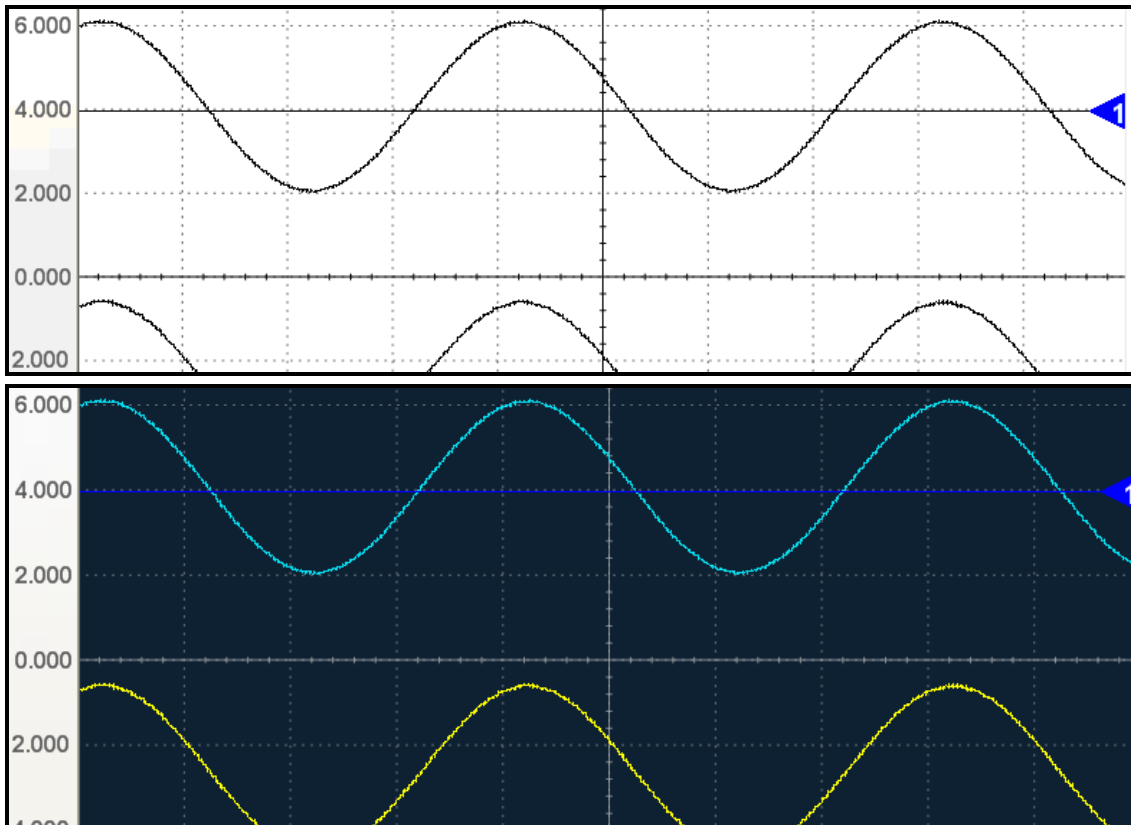

5.2.3.9 Lissajous pattern




X-Y Plot acts to analyze correlation of data of two channels. Lissajous diagram is displayed in the screen when you use X-Y Plot, which enables to compare frequencies, amplitudes and phases of counterpart waveform against the reference waveform. This makes it possible to compare and analyze frequency, amplitude and phase between input and output.

Do these steps as follows:


1. Connect the CH1 probe to the input of the circuit, and connect the CH2 probe to the output of the circuit.
2. Adjust the vertical scale and offset to display approximately the same amplitude signals on each channel.



3. Click . The oscilloscope will display a Lissajous pattern representing the input and the output characteristics of the circuit.

4. Adjust the scale and offset to a desirable waveform display.
5. Apply the Ellipse Method to observe the phase difference between the two channels.

Instruction of the Ellipse Method

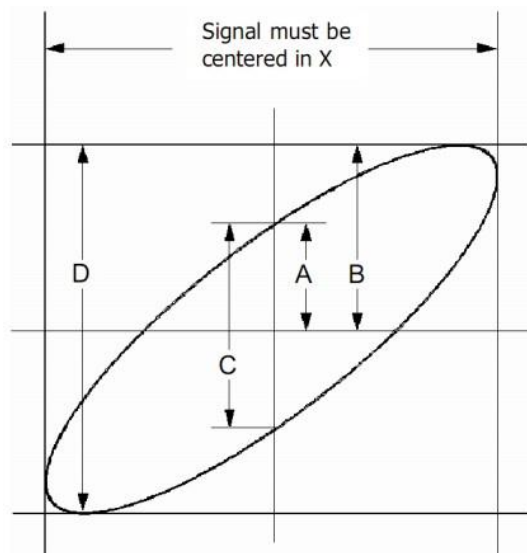

$\sin\theta = A/B$ or C/D , where θ = phase shift (in degrees) between the two signals.

From the formula above:

$$\theta = \pm \arcsine (A/B) \text{ or } \pm \arcsine (C/D)$$

θ must be in the range of $(0 \sim \pi/2)$ or $(3\pi/2 \sim 2\pi)$ if the main axis of the ellipse is between I and III quadrant, . If the main axis is at II and IV quadrant, θ must be in the range of $(\pi/2 \sim \pi)$ or $(\pi \sim 3\pi/2)$.

5.2.3.10 Save




Save the collected data in the text format (.TXT).

5. 2. 3. 11 Screenshot




Do screenshot of the current entire screen.

5.2.4.1 Time Knob

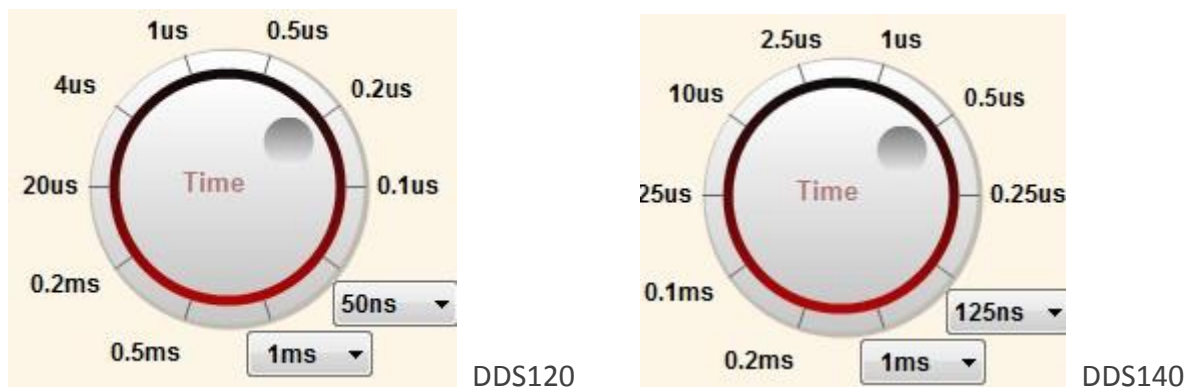

Use this knob to change the time base parameter (Time/DIV) for both channels at the same time. The selected value indicates the time interval the width of each grid represents.

5.2.4.2 Voltage Knobs

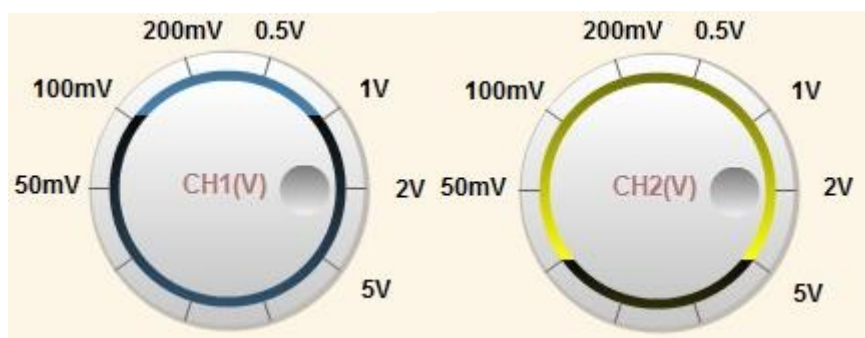

Use these knobs to change the Volt/DIV for each channel. The selected value determines the voltage range the height of each grid represents. This value does not affect the scale, but only how the waveform is displayed.

5.2.4 Auto Measurement

Measured Parameters	Description
Max	The highest voltage value of the waveform
Min	The lowest voltage value of the waveform

P-P	Peak-to-Peak (Max – Min)
Freq	Average frequency of the waveform
Average	Average voltage value of the waveform
Period	Period of the waveform
+Width	The pulse width positive / negative with respect to the mid value as reference
-Width	
Duty Rate	Positive pulse width divided by the cycle
Rise time	Time of waveform from peak-to-peak position increased from 5% to 95%
Vrms	RMS value of the voltage value

The Auto Measurement Area of this software shows a variety of real-time measurement data for the waveform currently displayed in the Waveform Display Area. Click on the channel tabs to switch.

Name	Unit	Value
Max	V	0.863
Min	V	-0.826
P-P	V	1.689
Freq	K Hz	0.992
Average	V	0.000
Period	us	1008.000
+Width	us	508.000
-Width	us	500.000
Duty Rate	%	50.397
RiseTime	us	12.000
Vrms	V	0.597


<
>

CH1


CH2

Note: If the waveform displayed is shorter than one period or longer than 50 cycles, the results of time-related measurements will be displayed as 0, but that doesn't mean the actual value is 0.

 5.2.5 Menu




5.2.5.1 File

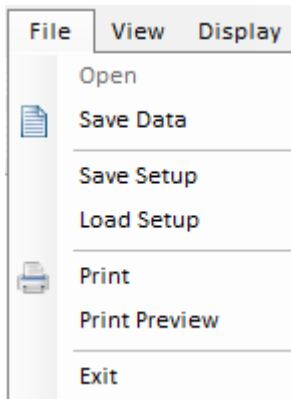

- Save Data: Save the collected data in the text format (.txt).
- Save Setup: Save the current settings in the text format (.set).
- Load Setup: Load the file of text format (.set) into current settings.
- Print: Print the current waveforms which displayed on screen.
- Print Preview: Preview the current waveforms to print.

5.2.5.2 View

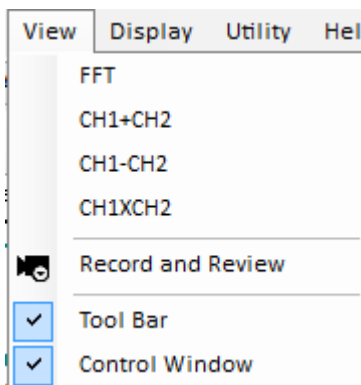


- FFT: FFT measurement includes amplitude measurement (displayed on the vertical axis) and frequency measurement (displayed on the horizontal axis).
- CH1+CH2
- CH1-CH2
- CH1*CH2
- Record and Review: Show or hide the panel of Record and Review.




- Toolbar: Show or hide the toolbar.




- Control Window: Show or hide Time knob and Voltage knobs.

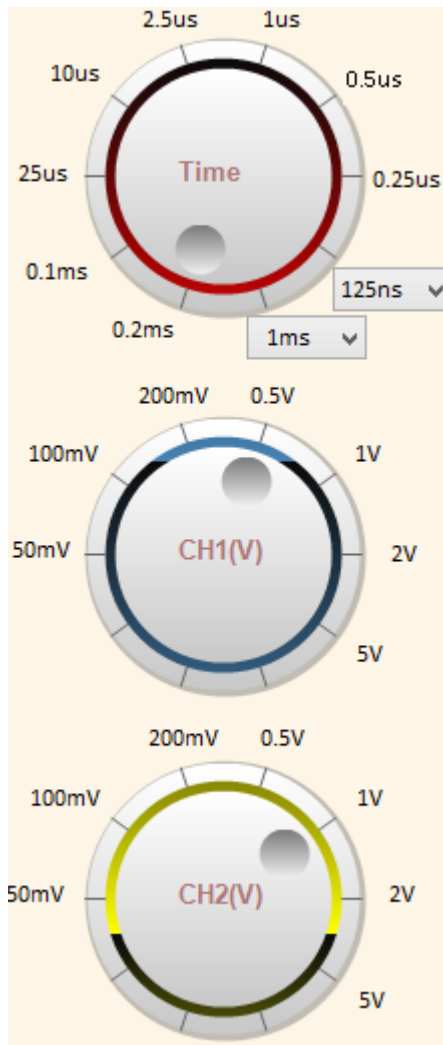

5.2.5.3 Display

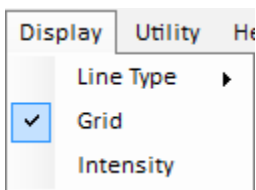

➤ Line Type:

 


Vectors: Solid lines to draw the waveform.

Dots: Dot lines to draw the waveform.

- Grid: Show or hide the grid in the waveform area.
- Intensive: Set the intensity of waveform and grid.



5.2.5.4 Utility

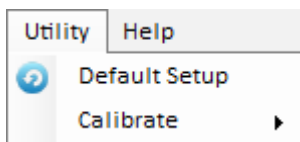

- Default Setup: Load the factory setup.
- Calibrate: Adjust the zero-input voltage to zero position. You should remove all the probes and turn on both ch1 and ch2 in the toolbar before performing this calibration.

CH1: CH2:

5.2.6 Horizontal Toolbar (Settings)



- Coupling Mode: DC / AC coupled
- Turn on/off Channels: Channel is 'on' and channel 2 is 'off' by default.
- Probe Settings: Set this to match your probe attenuation factor (1X, 10X or 100X).

➤ Trigger:

Trigger CH1 ▾

Channel Selection: CH1 / CH2



Trigger method: Rising Edge Trigger / Falling Edge Trigger

No Trigger ▾

Trigger type: No Trigger / Normal /Single*

No Trigger ▾ AUTO

Auto Trigger


➤ Modules:

Oscilloscope ▾


Oscilloscope / Oscilloscope + Signal Generator / Logic Analyzer

Trigger level:

When trigger type “Normal” or “Single” is selected, a triangle marker (“T”) will appear in the Waveform Display Area. Drag it to adjust trigger level.

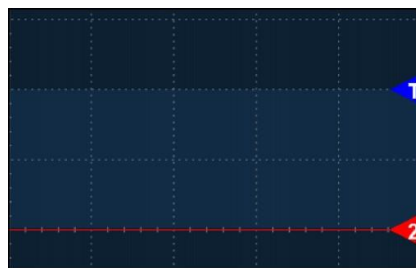

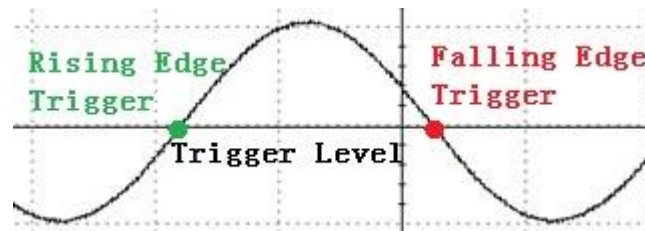


Rising Edge Trigger / Falling Edge Trigger




5.2.7 Toolbar



- Save Data:  Save the collected data in the text format (.txt).
- Print:  Print the current waveforms which displayed on screen..
- Intensity:  Set the intensity of waveform and grid.



- Zero Calibration:  Adjust the zero-input voltage to zero position.
You should remove all the probes and turn on both ch1 and ch2 in the toolbar before performing this calibration.

CH1: CH2:

- Record and Review :  Shortcut for "Record and Review".



Factory Setup:  Load the factory setup.

5.2.8 Record and Review



Waveform records will be saved in a unique file format

("dds120" or "dds140") in the application folder.


File name will be automatically generated using date and time when the recording begins.

File name format is: Year + Month + Day + Hour + Minute.

Configuration



Click the Configuration button to set the number of frames you want to record. A window for settings will pop up.

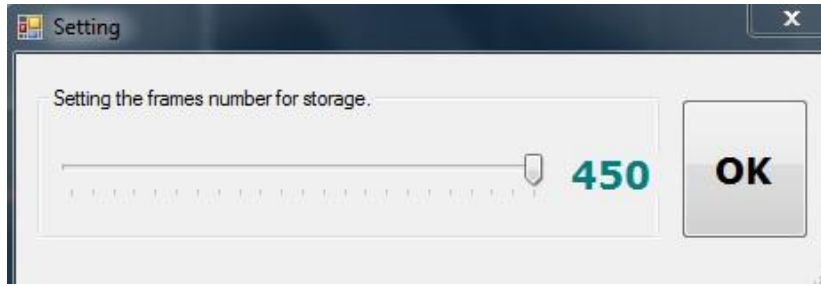

Record



Click the Record button to start recording (when it's red) and the button will start flashing, indicating that the waveforms are being recorded. This button is gray when the recording function is temporarily unavailable. Possible causes are: the device is not properly connected, the data collection has not started or the waveform is being played back.

The recording function not only records all the waveform data on the screen, but also the following settings. These settings will be automatically restored during playback.


1	Selected value of the Time knob
2	Selected value of the Voltage knob(s) for channel(s) that is/are turned on
3	Channel Status (On/Off)

Playback



1. Click the Folder button
2. Select the file you want to open and click "Open".


The full path of the selected file will be displayed in the text field below the button and playback will start.

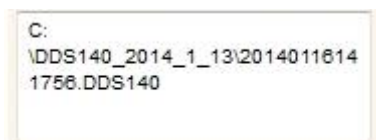

4. A dialog box will prompt when the software finishes playing the file.


Play Control:



This shows the total number of frames the file contains and the frame which is currently being played. You can move forward or backward by clicking Up / Down arrows or enter the frame number that you want to play. Click  to start / pause.

Note:

1. Real-time data collection will stop when the software starts playing a selected file.
2. One of the ways to tell whether the software is collecting real-time waveform data or playing a selected file is to look at the background color of the Waveform Display Area.

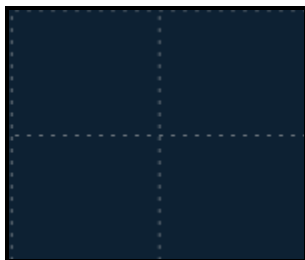


Real-time collection
Dark Blue



Playback
Brown


5.3 Signal Generator Software Function

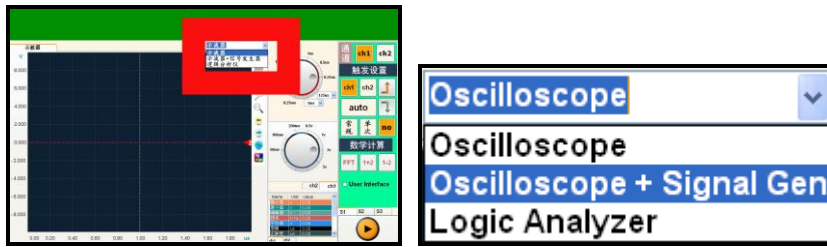

When the Signal Generator module is plugged in, please select "Oscilloscope + Signal Generator" here to enable relevant functions (shown in a new tab).



Click this Action button to start signal output. Click it again to stop.

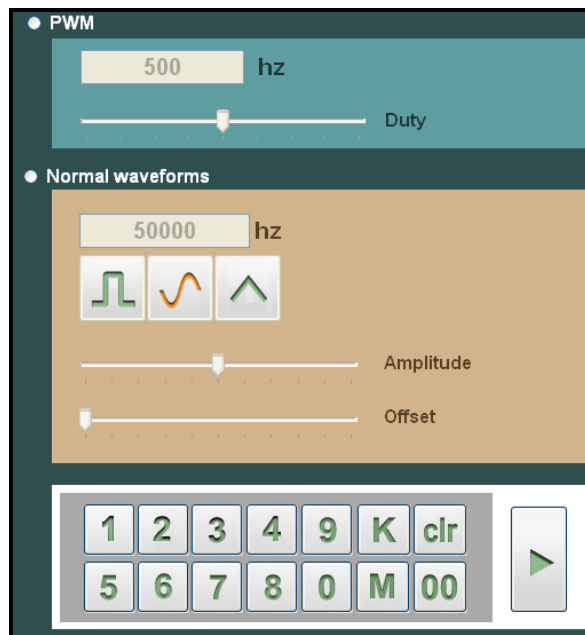

5.3.1 PWM

Select the PWM to output standard square wave signal (maximum frequency: 20K). The duty cycle could also be adjusted, stepping at 10%. Frequency can be specified using the keypad provided. The default output settings are 500Hz and 50% duty cycle.

5.3.2 Basic Waveform Signal




Select one of the waveforms: square wave, sine wave, triangle wave.




Frequency can be specified using the keypad provided (1Hz ~ 20MHz).

The amplitude and offset can be easily set via slider control.

5.4 Logic Analyzer Software Function

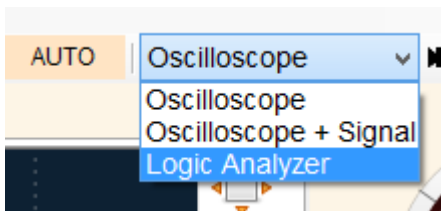

When the Logic Analyzer module is plugged in, please select "Logic Analyzer" here to enable relevant functions.

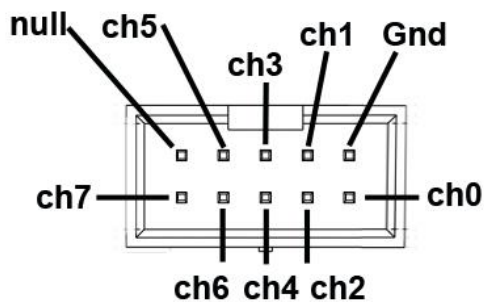

Logic Analyzer Interface Front View

The numbers on the left side indicate the channel number. Waveforms for different channels are identified by color.



Use the Time knob to change the time base parameter (Time/DIV) for all channels.

Click the Start button to start.

Start

Click again to stop.

Stop